Notes

RGMA Datasets will be used to report install and removal of AMR

Meter readings (corrector readings if corrector is present) are mandatory while reporting install or removal of AMR

Asset Status Code in ASSET dataset is used to denote install and removal.

LI = Install

RE = Remove

Once AMR is installed, shipper need not actively report its status while performing any updates on other devices.

When meter is removed (isolation) then shipper need not send AMR removal as a mandatory transaction, we will assume that it is removed and update the system accordingly.

Relationship for AMR Install with Meter & Corrector

DataSet	occ	OPT	DESCRIPTION
HEADR	1	M	RGMA Header details
TRANS	1	M	The transaction/activity details(INSTL)
MTPNT	1	М	The Meter Point details
ASSET	1	М	The existing Meter Asset details(REPRT)
METER	1	0	The Meter details
REGST	1	М	The Register details
REAL	3 1	М	The meter readings
ASSET	1	М	AMR Details(UPDTE) Asset Status Code (A0037) should be reported as LI
ASSET	1	M	The existing Converter Asset details(REPRT).
CONVE	1	0	The Converter details.
REGST	1	М	The Uncorrected Register details
REAL	3 1	М	The Uncorrected reading details.
REGST	1	М	The Corrected Register details
REAL	3 1	М	The Corrected reading details.
APPNT	1	М	The Activity date/time details
NAME	1	0	Name of the Meter Worker
ADDRS	1	0	Address details of the Meter worker
CONTM	1	0	Contact details of Meter Worker
NAME	1	0	Name of the Requester
MKPRT	1	0	Market Participant(Meter Worker)
TRAIL	1	M	RGMA Trailer details

- 1. The Asset dataset shown in the relationship is the preferred order. The transaction will not be rejected even when this order is not maintained.
- 1. The Asset dataset shown in the relationship is the preferred order. The transaction will not be rejected even when this order is not maintained.

 2. The Name dataset shown in the relationship is the preferred order (Meter worker followed by the requester). The transaction will not be rejected even when this order is not maintained.

 3. The readings for the converter is shown in the preferred order (unconverted followed by converted). The transaction will not be rejected even when this order is not maintained.

 4. Details provided in the ASSET dataset for AMR other than the following fields will be ignored;

 Record Identifier (ASSET)

Transaction Type Code (UPDTE)
Asset Class Code (AMR)
Asset Status Code (LI)

Relationship for AMR Install with Meter Only

DataSet					OPT	DESCRIPTION
HEADR				1	M	RGMA Header details
TRANS				1	М	The transaction/activity details(INSTL)
MTPNT				1	M	The Meter Point details
	ASSET			1	М	The existing Meter Asset details(REPRT)
	METER		1	0	The Meter details	
		REGST		1	М	The Register details
			READG	1	М	The meter readings
ASSET			1	М	AMR Details(UPDTE) Asset Status Code (A0037) should be reported as LI	
APPNT	APPNT			1	M	The Activity date/time details
NAME	NAME			1	0	Name of the Meter Worker
	ADDRS			1	0	Address details of the Meter worker
	CONTM			1	0	Contact details of Meter Worker
NAME			1	0	Name of the Requester	
MKPRT			1	0	Market Participant(Meter Worker)	
TRAIL			1	М	RGMA Trailer details	

- 1. The Asset dataset shown in the relationship is the preferred order. The transaction will not be rejected even when this order is not maintained.

 2. The Name dataset shown in the relationship is the preferred order(Meter worker followed by the requester). The transaction will not be rejected even when this order is not maintained.
- 3. The readings for the converter is shown in the preferred order(unconverted followed by converted). The transaction will not be rejected even when this order is not maintained.

 4. Details provided in the ASSET dataset for AMR other than the following fields will be ignored;

 Record Identifier (ASSET)

Transaction Type Code (UPDTE)
Asset Class Code (AMR)
Asset Status Code (LI)

Relationship for AMR Remove with Meter & Corrector

DataSet				occ	OPT	DESCRIPTION
HEADR			1	М	RGMA Header details	
TRANS			1	М	The transaction/activity details(REMVE)	
MTPNT	MTPNT			1	M	The Meter Point details
	ASSET			1	M	The existing Meter Asset details(REPRT)
	METER			1	0	The Meter details
	REGST		1	M	The Register details	
	READG			1	M	The meter readings
	ASSET			1	M	AMR Details(UPDTE) Asset Status Code (A0037) should be reported as RE
	ASSET			1	M	The existing Converter Asset details(REPRT).
	CONVE			1	0	The Converter details.
	REGST			1	M	The Uncorrected Register details
	READG		1	M	The Uncorrected reading details.	
		REGST		1	M	The Corrected Register details
	READG			1	M	The Corrected reading details.
APPNT	APPNT			1	M	The Activity date/time details
NAME			1	0	Name of the Meter Worker	
ADDRS			1	0	Address details of the Meter worker	
CONTM			1	0	Contact details of Meter Worker	
NAME			1	0	Name of the Requester	
MKPRT	MKPRT			1	0	Market Participant(Meter Worker)
TRAIL			1	M	RGMA Trailer details	

- 1. The Asset dataset shown in the relationship is the preferred order. The transaction will not be rejected even when this order is not maintained.
- 2. The Name dataset shown in the relationship is the preferred order(Meter worker followed by the requester). The transaction will not be rejected even when this order is not maintained.
- 2. The readings for the converter is shown in the preferred order(inter worker followed by converted). The transaction will not be rejected even when this order is not maintained.

 4. Details provided in the ASSET dataset for AMR other than the following fields will be ignored;
 Record Identifier (ASSET)

 Transaction Type Code (UPDTE)

 Asset Class Code (AMR)

 Asset Status Code (RE)

Relationship for AMR Remove with Meter Only

DataSet					OPT	DESCRIPTION
HEADR			1	M	RGMA Header details	
TRANS			1	M	The transaction/activity details(REMVE)	
MTPNT			1	M	The Meter Point details	
	ASSET			1	M	The existing Meter Asset details(REPRT)
		METER		1	0	The Meter details
		REGST		1	M	The Register details
	READG			1	М	The meter readings
	ASSET				M	AMR Details(UPDTE) Asset Status Code (A0037) should be reported as RE
APPNT	APPNT			1	M	The Activity date/time details
NAME	NAME			1	0	Name of the Meter Worker
ADDRS			1	0	Address details of the Meter worker	
CONTM				1	0	Contact details of Meter Worker
NAME			1	0	Name of the Requester	
MKPRT			1	0	Market Participant(Meter Worker)	
TRAIL			1	M	RGMA Trailer details	

- 1. The Asset dataset shown in the relationship is the preferred order. The transaction will not be rejected even when this order is not maintained.

 2. The Name dataset shown in the relationship is the preferred order (Meter worker followed by the requester). The transaction will not be rejected even when this order is not
- 3. The readings for the converter is shown in the preferred order(unconverted followed by converted). The transaction will not be rejected even when this order is not maintained.

 4. Details provided in the ASSET dataset for AMR other than the following fields will be ignored;

 Record Identifier (ASSET)

Transaction Type Code (UPDTE)
Asset Class Code (AMR)

Asset Status Code (RE)